


## FIRTREE® LAS1011 PERIMETER SEAL FITTING GUIDE

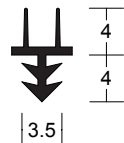

LENGTH \_\_\_\_\_

### CONTENTS

- FIRTREE® LAS1011 perimeter seal

### TOOLS REQUIRED

- Tape measure
- Pencil or marker
- Router with 3mm cutter
- Scissors, knife or snips

### NOTE

Recommendations as to methods, use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.

Lorient reserves the right to make alterations or delete any installation detail without prior notice.

For more information please call:

**+44 (0)1626 834252**

### STEP 1

Remove the seal from the packaging and measure the door height to determine the seal length required. Cut lengths to suit door frame.

### STEP 2

Groove the door or frame 3mm wide x 4mm deep.

### STEP 3

Push fit the LAS1011 product into the groove.



Gasketing materials for fire doors intended for application to wood and plastic covered composite and wood core doors rated up to 1.5 hours. Listed steel frames and/or classified steel covered composite, hollow metal doors rated up to 3 hours.

V1



Lorient Polyproducts Ltd  
Endeavour House  
Fairfax Road  
Heathfield Ind Estate  
Newton Abbot  
Devon TQ12 6UD  
United Kingdom

+44 (0)1626 834252  
[www.lorientgroup.com](http://www.lorientgroup.com)

All rights reserved. No part of this fitting guide may be reproduced, stored in a retrieval system, or transmitted in any means, electronic, mechanical, photocopying, recording or otherwise without the written permission of Lorient Polyproducts Limited.  
© Lorient Polyproducts Ltd 2019