


StrongBOLT™

Issue 1 (Aug 22)


Fitting instructions
3 Lever Sashlock




General View of Main Parts

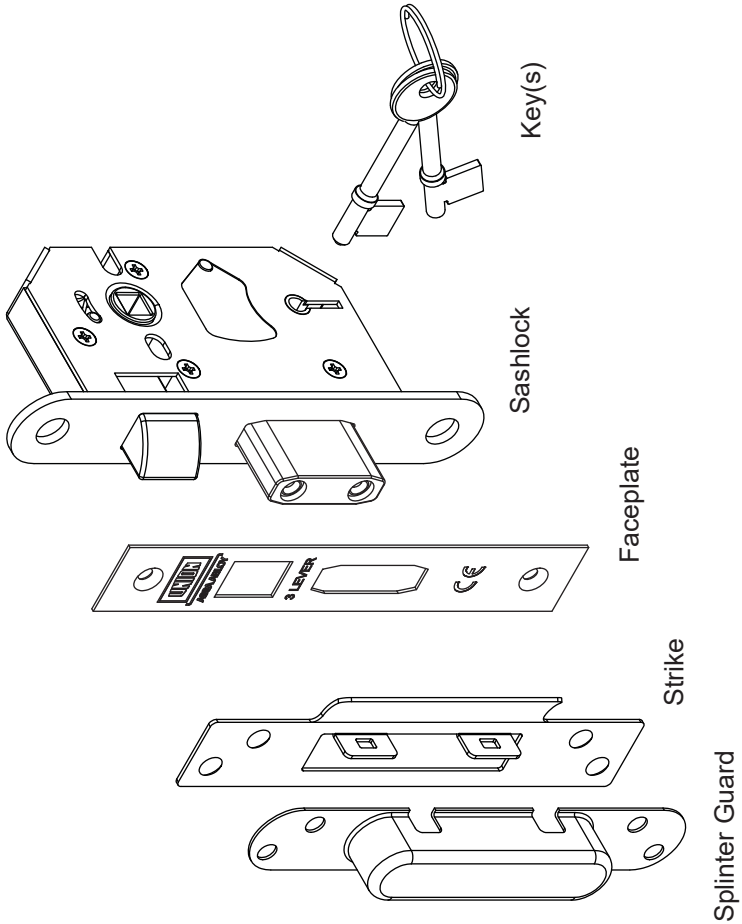


Tools Required

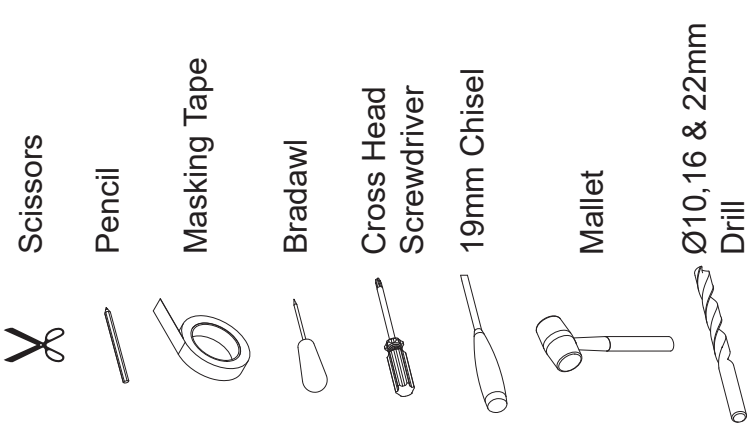


1a

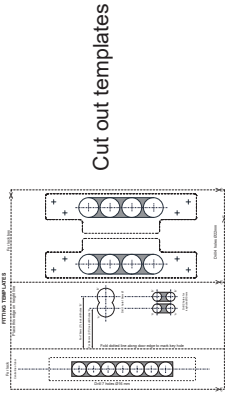

1b

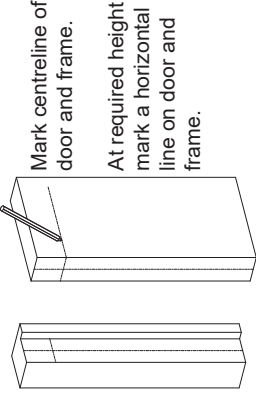


2

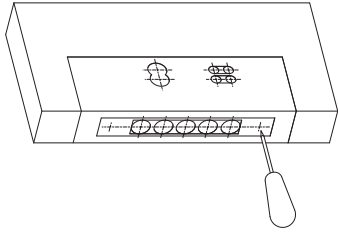


Mark the centres of all holes with a bradawl then remove template.


4a

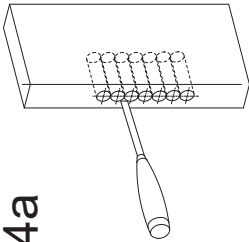


4b

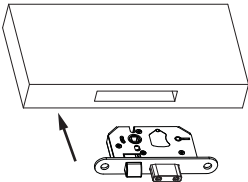


5a

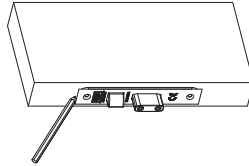

5b

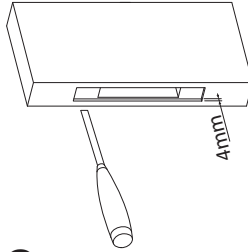


3

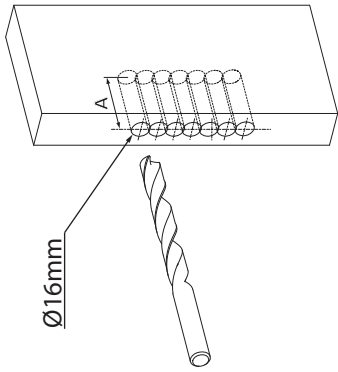

Dim 'A'	Dim 'B'
2.5"/68mm Lock	72mm
3" / 81mm Lock	85mm

6

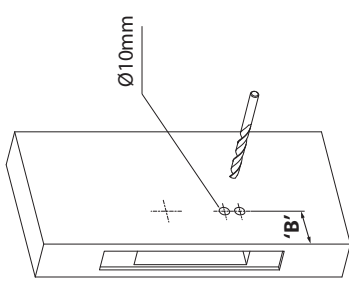

Dim 'B'	Dim 'B'
2.5"/68mm Lock	45mm
3" / 81mm Lock	57.5mm

7a

Chisel out remaining timber between holes.

7b

$\varnothing 16\text{mm}$

8

Secure template to frame with tape.
Using a bradawl mark all centres (+).
Then remove template.

9

$\varnothing 22$

25mm

10a

Chisel out remaining timber between drill holes.

10b

11a

11b

2.5 mm

12

13a

Reverse latch if necessary.

Go to 16

13b

Go to 14

14

1

2

3

15

16

17

FITTING TEMPLATES

For lock

Centreline of door

Place this edge on height line

For lock box

Drill 7 holes $\varnothing 16\text{ mm}$

For 81mm (3") lock drill holes 'B'

For 68mm (2.5") lock drill holes 'A'

Fold dotted line along door edge to mark key hole

Drill 1 hole 16mm $\varnothing$

Drill 2 holes for keyhole $\varnothing 10\text{mm}$

Drill 4 holes $\varnothing 22\text{mm}$



0845 223 2124



uniononline.co.uk

ASSA ABLOY Opening Solutions UK and Ireland
School Street, Willenhall, West Midlands WV13 3PW, UK