

StrongBOLT™


Fitting instructions
5 Lever Deadlock

Issue 1(Aug 22)




ASSA ABLOY


General View of Main Parts

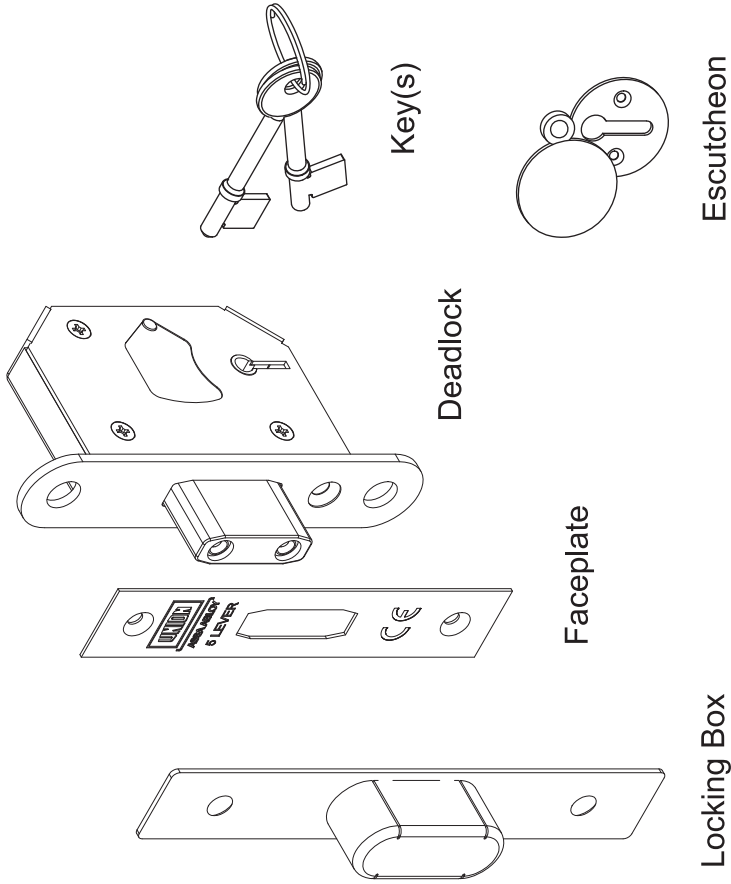


Tools Required

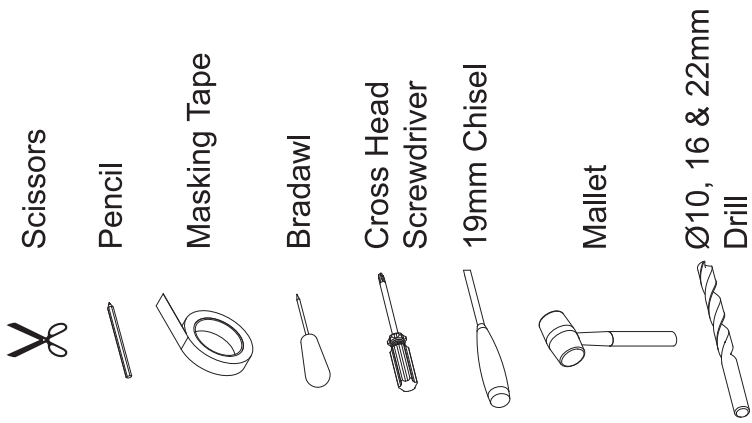


1a

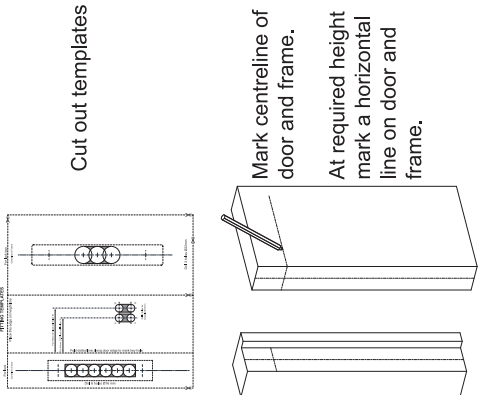

1b

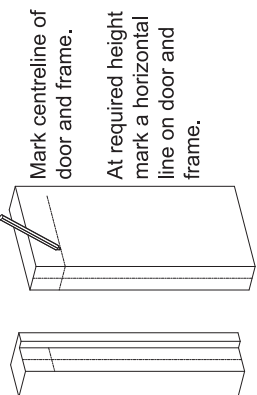


2

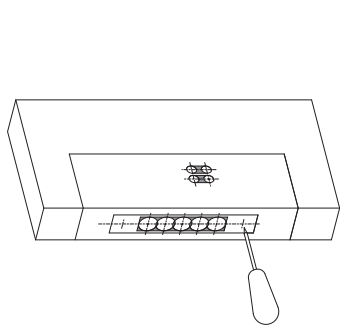


Using the centreline guide and height guide, tape templates to door.

Mark the centres of all holes with a bradawl then remove template.


3

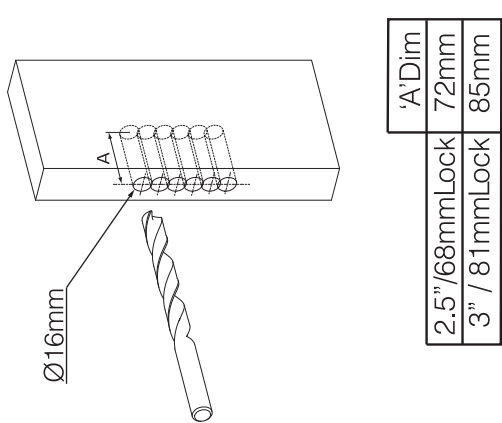


4a

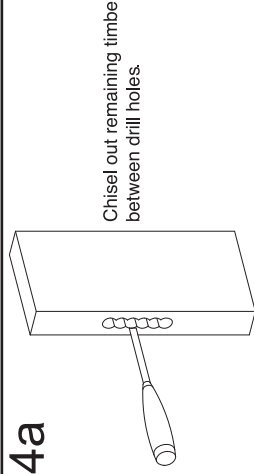


4b

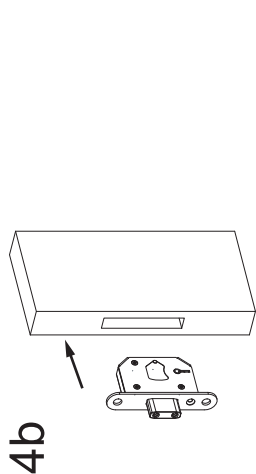


5a

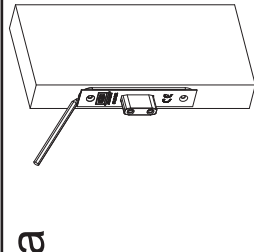

5b

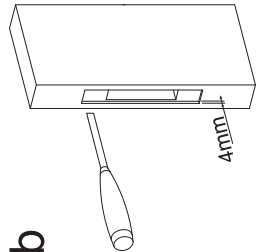

6

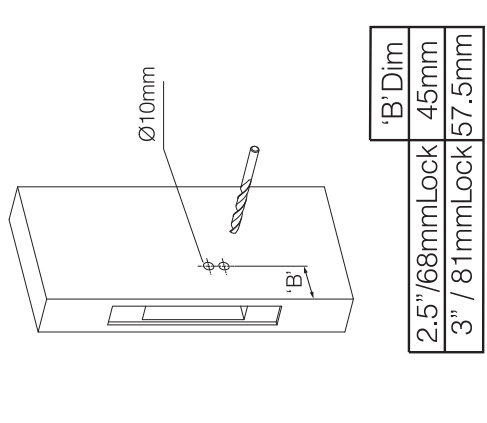

FITTING TEMPLATES

For lock

Centreline of door

For lock box

Centreline of Frame

Place this edge on height line

For 81mm (3") lock drill holes 'B'

For 68mm (2.5") lock drill holes 'A'

Fold dotted line along door edge to mark key hole

Drill 2 holes for keyhole Ø10mm

Drill 6 holes Ø16 mm

Drill 3 holes Ø22mm

