

StrongBOLT™


Fitting instructions
5 Lever Sashlock

Issue 1 (Aug 22)




ASSA ABLOY


General View of Main Parts

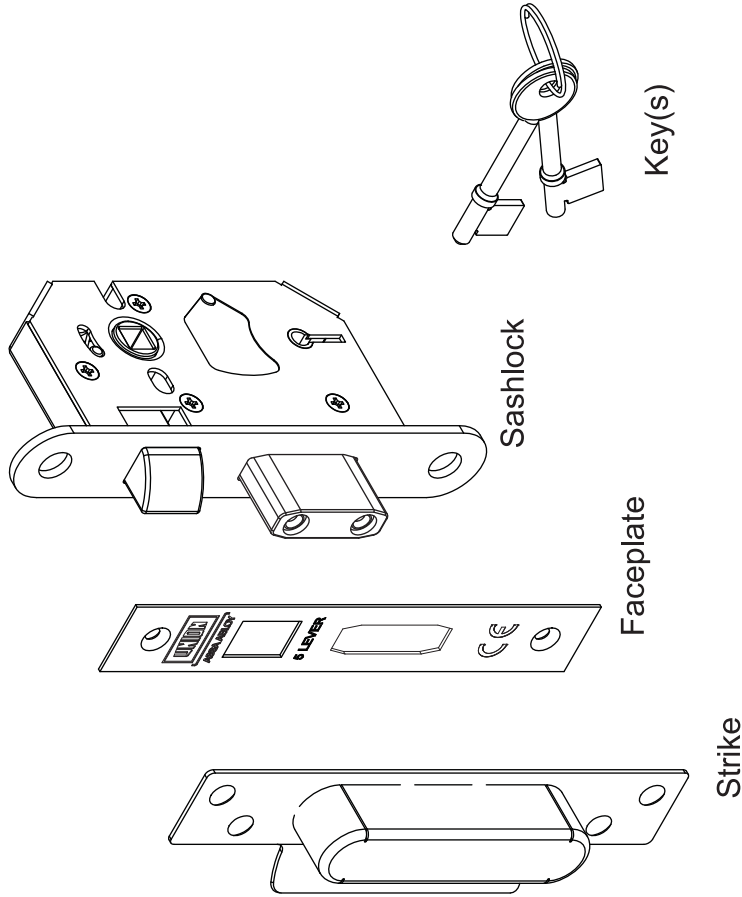

Tools Required

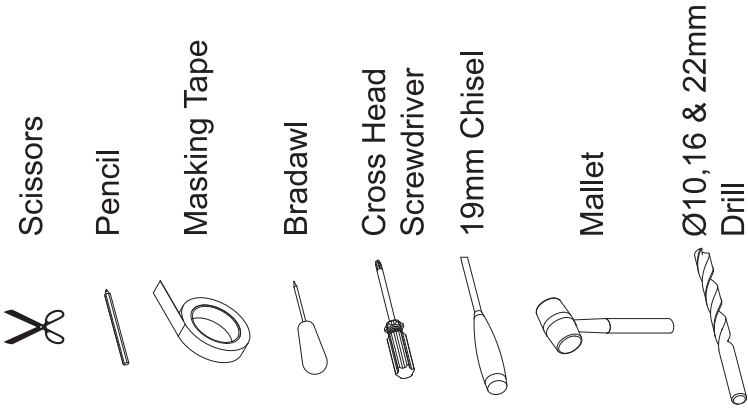


1a

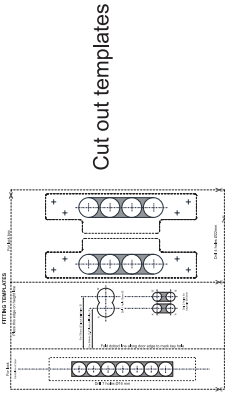

Cut out templates


1b

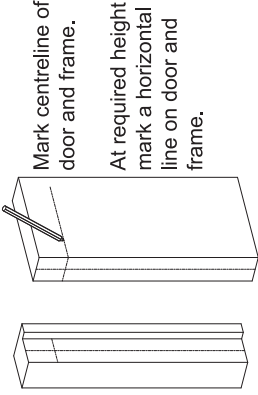

Mark centreline of door and frame.

At required height mark a horizontal line on door and frame.


2

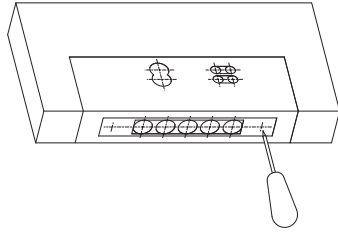

Using the centreline guide and height guide, tape templates to door.


Mark the centres of all holes with a bradawl then remove template.

4a

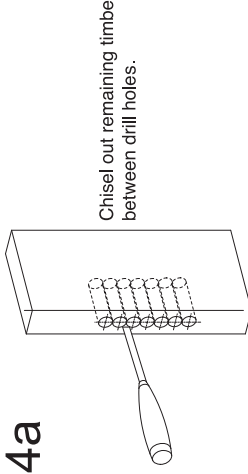


Chisel out remaining timber between drill holes.


4b

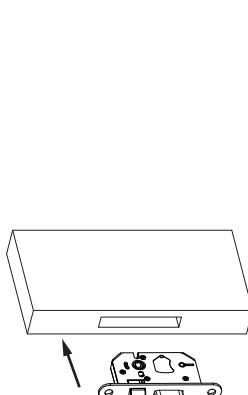


5a

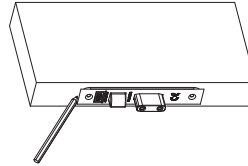

5b

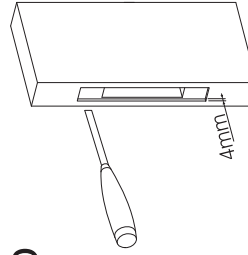


3

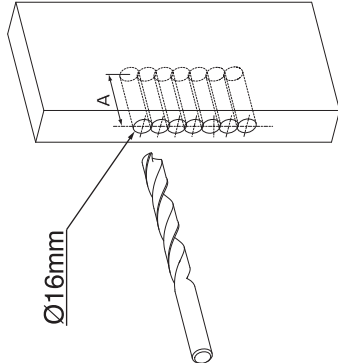

Ø16mm

'A' Dim	2.5"/68mm Lock	72mm
	3" / 81mm Lock	85mm


6

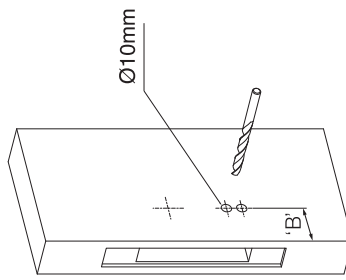

Ø10mm

'B' Dim	2.5"/68mm Lock	45mm
	3" / 81mm Lock	57.5mm

FITTING TEMPLATES

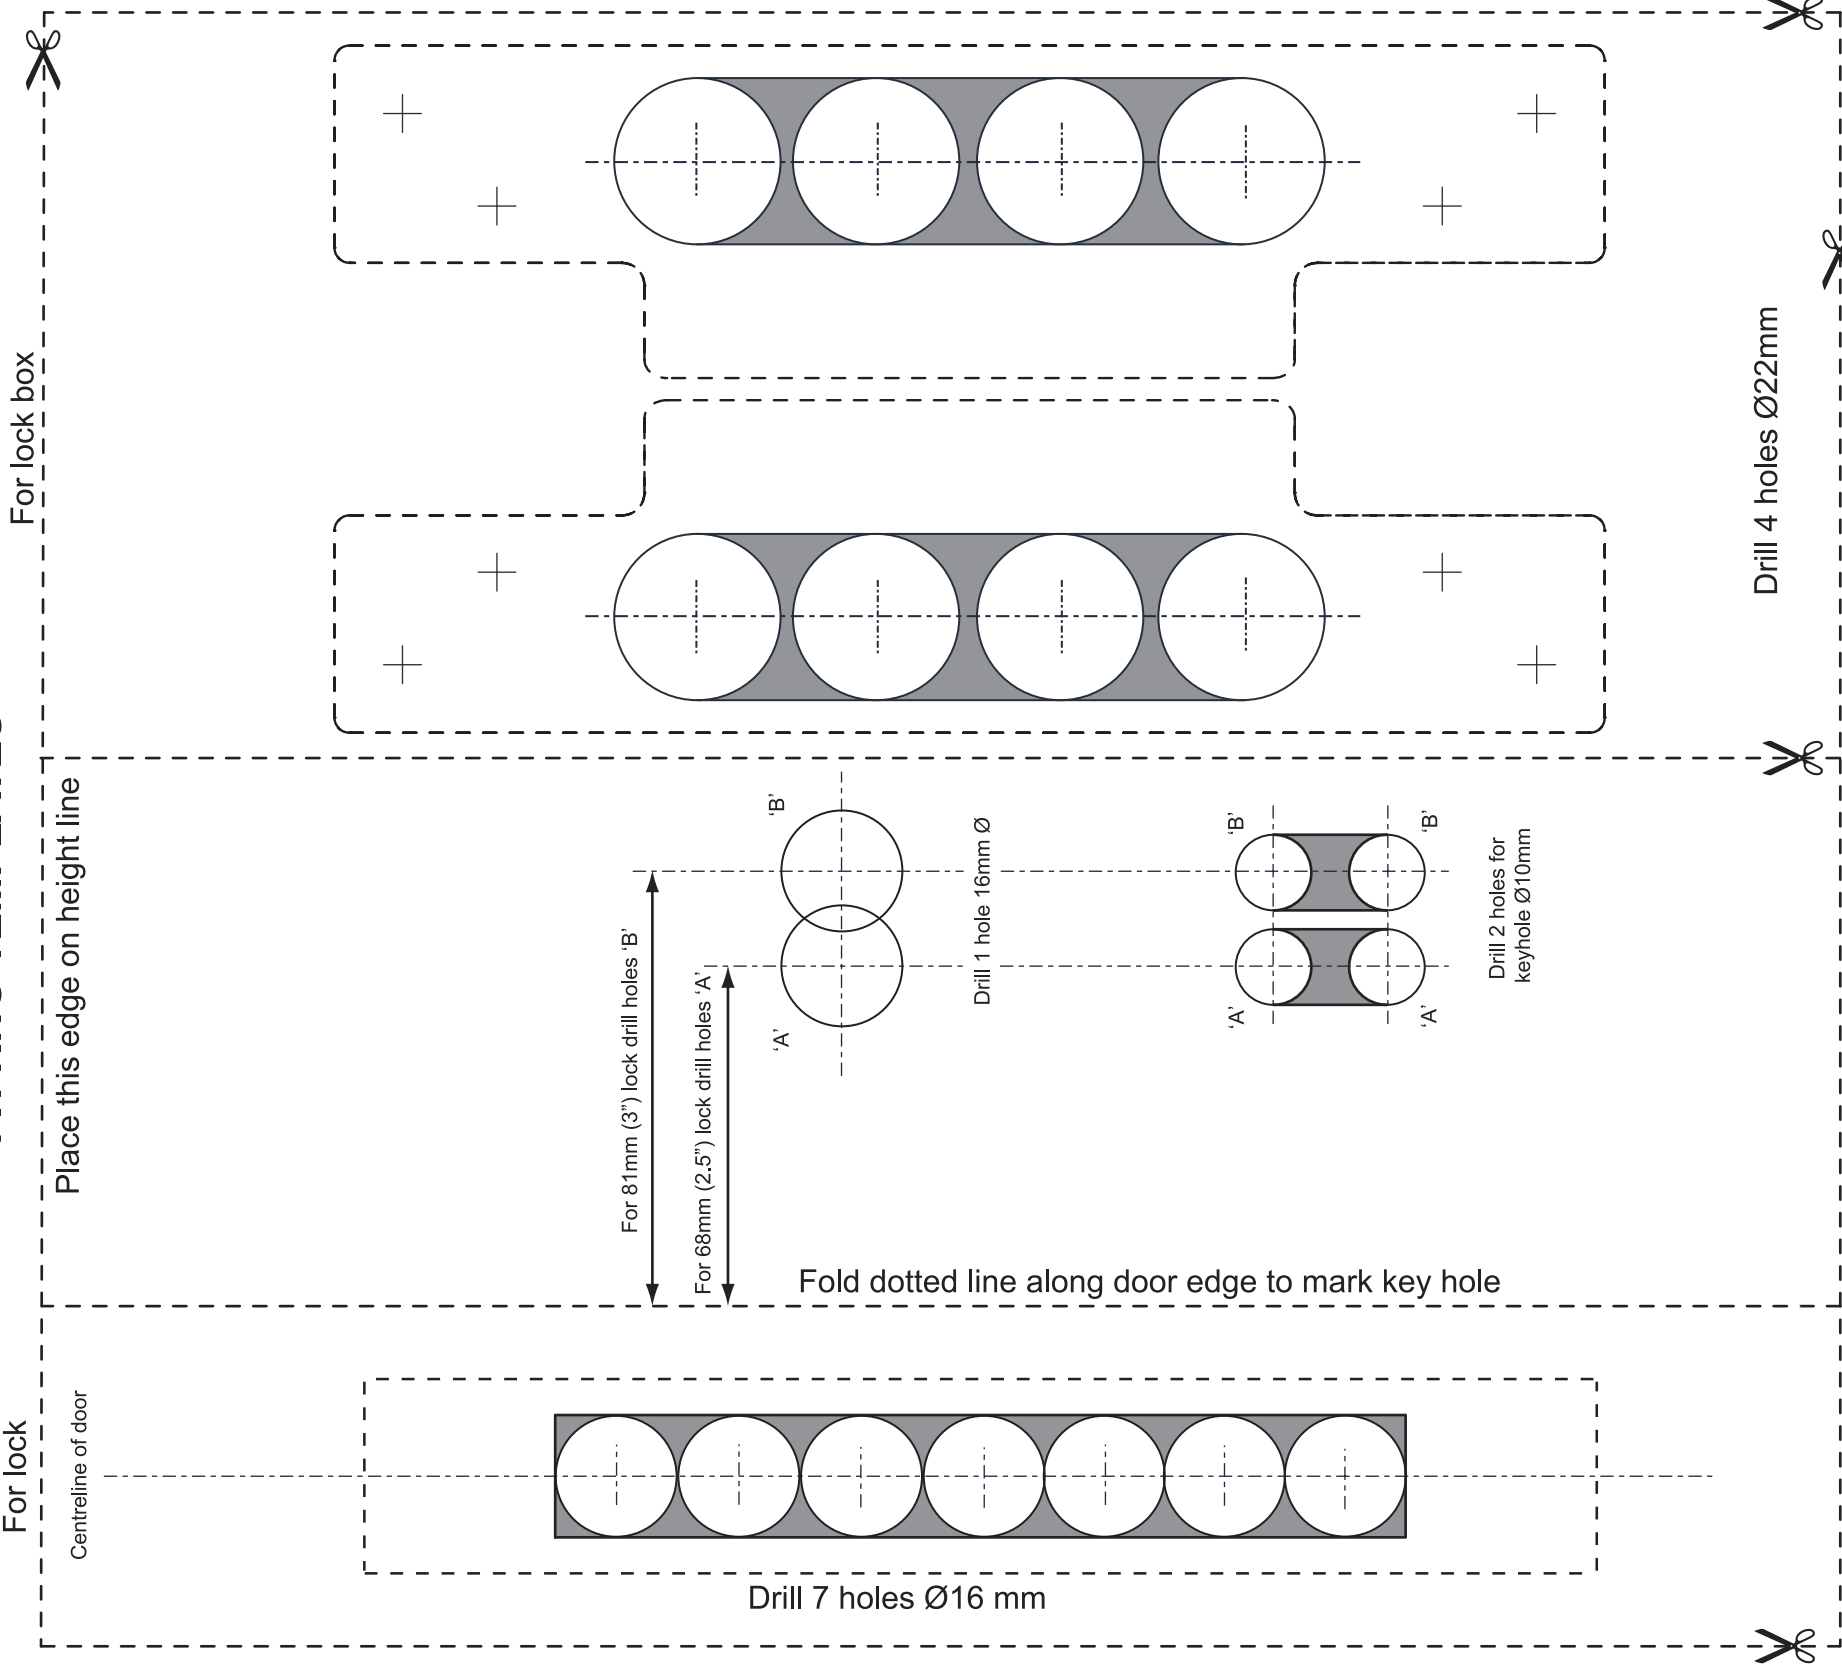

7a	8	9
10a	11a	12
10b	11b	13a
13b	14	15
16	17	18



0845 223 2124



uniononline.co.uk

ASSA ABLOY Opening Solutions UK and Ireland,
School Street, Willenhall, West Midlands WV13 3PW, UK