

CONTENTS


Before starting the installation, ensure that all components listed below are supplied:

- 1x ES100/ES110 Series Electric Strike
- 1x screw kit
- 1x warranty information
- 1x installation instructions
- 1x diode
- 1x strike template
- 1x mounting kit (for ES110 variants only)


ACCESSORIES (FACEPLATES AND EXTENSION LIPS)

Additional accessories are available for optional mounting & spare parts (not supplied):


- 220200-518 Mounting kit
- 210100-544 Faceplate - A (ANSI Short)
- 210100-530 Faceplate - B (ANSI Long)
- 200100-519 Faceplate - C
- 210100-523 Faceplate - J
- 210100-528 Faceplate - F (UK Sash RH) [DIN Left]
- 210100-527 Faceplate - G (UK Sash LH) [DIN Right]

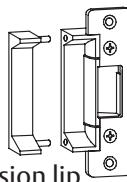

220110-502
15mm Extension lip

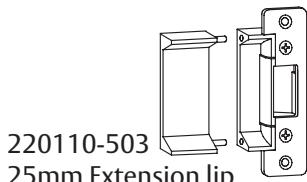

220110-503
25mm Extension lip

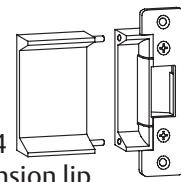

220110-504
50mm Extension lip

IMPORTANT SAFETY INSTRUCTIONS AND WARNINGS

1. Read and follow all instructions prior to installing and using this product.
2. These instructions or a full copy of these instructions should be provided to the user.
3. These instructions should be kept by the end user for future reference.
4. Obey and heed all warnings on the product and in the manual.
5. Ensure the functionality, specification and configuration of the ES100/ES110 Series Electric Strike is befitting for the intended application and environment. This may include in the event of a power failure and the ability to exit any building access point in an emergency.
6. Do not use this unit near excess water or moisture not typical to natural rainfall and installation practices i.e., installed in a door frame/enclosure.
7. Do not use this unit in environments with excessive in-air dust that could accumulate and prevent correct operation.
8. Avoid prolonged exposure to direct sunlight or heat.
9. This product is not suitable for environments with explosive or flammable atmospheres.
10. Only use attachments, accessories and fixings as specified by the manufacturer.
11. Clean with a dry cloth only, do not use chemicals.
12. Refer all servicing to qualified service personnel. Servicing or replacement is required when the unit has been damaged. This may include either mechanical or electrical issues. This may also include ingress of liquid spilled or objects which have fallen into the unit or if the unit has been exposed to excessive rain or moisture and no longer operates normally. Do not attempt to service this product yourself.
13. Opening or removing covers may expose you to dangerous voltages or other hazards.
14. To prevent risk of fire or electric shock ensure the power supply or system is suitable for this product in addition to any other units already sharing the same power supply or system.
15. Do not let objects or liquids enter the product as they may prevent correct operation, possibly preventing door access or short-out parts that could result in a fire or electric shock.
16. Modification of this product in any way may affect both its functionality and compliance status and will void any warranty and claim to compliance, ratings or performance.
17. The safety of this product are essential to its compliance with EN 14846. No modification of any kind, other than those described in these instructions, is permitted.
18. Ensure the correct power supply is connected.
DO NOT connect AC mains power to this product.
19. The bolts heads and keepers must be fitted to provide secure engagement. Care shall be taken to ensure that no projection of the bolt heads, when in the withdrawn position interfere with the operation of the electric strike, door fitment or prevent the door swinging freely.

Before fitting the Electric Strike to a fire/smoke resisting door, the fire certification should be examined to ensure the suitability of the Electric Strike for that door assembly. The ES110 was tested in accordance with EN 14846 (CE & UKCA) fire rating on both single timber doors (30 & 60 minutes) and single steel doors (240 minutes) configurations. For further information refer to the Declaration of Performance (DoP). Australasian Customers: This product is only fire rated when used in Power to Lock (PtL) configuration as a secondary lock. For Australian fire door applications, this electric lock has been successfully fire rated on fire door assemblies. Contact the supplier for further details, such as door type and door thickness etc. that may affect the fire door suitability and rating. Certificates can be downloaded from: www.assaabloy.com/au/en/about-us/product-certification
If the certificate is not listed, please contact the supplier for further details.

IMPORTANT INSTALLATION AND FIXING INSTRUCTIONS

1. Ensure the Electric Strike meets your physical (dimensions), grade/rating and electrical specification before going any further. It is recommended to verify that the door & door frame construction allows the use of the device.
2. Before fitting this product, the door should be checked to ensure correct hanging and freedom from binding.
3. The Electric Strike shall be installed using the specified fasteners and instructions for the door type and installation the Electric Strike is designed for.
4. This product is designed for timber or metal door frames.
5. This Electric Strike cannot be used on double action (double swing) doors.
6. Care shall be taken to ensure that any seal or weather-stripping fitted to the complete assembly, does not inhibit the correct operations of the Electric Strike.
7. Fixing instructions must be carefully followed during installation. The instructions and any maintenance instructions must be passed on by the installer to the user.
8. All components specified for intended the installation shall be fitted in order to ensure compliance, including compliance with EN 14846 (Power to Operate (PtO) operation only).
9. It is important to follow the instructions precisely to ensure the lock and strike plate are correctly positioned.

Note: Our Electric Strike is manufactured in accordance with EN 14846 will provide a high degree of safety and reasonable security provided that they are fitted to doors and door frames that are suitable and in good condition.

INSTALLATION INSTRUCTIONS

DRAWINGS NOT TO SCALE. INFORMATION IN THIS DATASHEET MAY BE CHANGED WITHOUT NOTICE.

IMPORTANT NOTE: Ensure any rebate strips or door stops are fitted before proceeding. Electric Strike must NOT be used as the only form of door stop.

This product has been designed for use in weather protected areas, and is NOT suitable for use in hazardous (flammable or explosive) atmospheres.

The Electric Strike is designed to be installed vertically.

The installation of a latch guard is recommended on outward opening external doors.

Set the strike to Power-to-Lock (PtL) or Power-to-Open (PtO).

To change the electric strike's mode of lock operation, remove the brass screws from top of strike body.

Invert strike and carefully release the small spring and 3 locking pins (x2 short pins, x1 long pin).

Re-insert the pins as shown in the diagrams for desired mode of lock operation (Fail Secure/PTO: See Fig 1; Fail Safe/PTL: See Fig 2).

Screw in the brass screw to strike body. This will secure the spring and the locking pins.

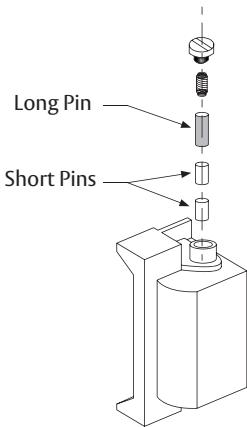


Fig.1
Power-to-Open
(Fail Secure)

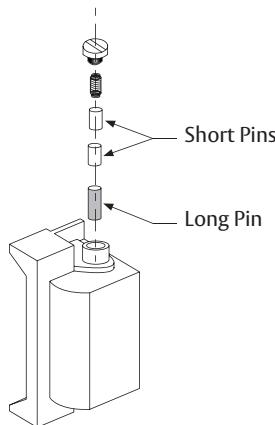


Fig.2
Power-to-Lock
(Fail Safe)

ELECTRICAL SPECIFICATIONS

Always ensure the correct transformer and cable guide is specified and used.

Electrical specifications	
Voltage supply	12VDC or 24VDC
Current draw	12VDC, 250mA after 1 sec.
	24VDC, 125mA after 1 sec.
Operation temperature	-20°C to +60°C @ 90% RH

Circuit protection: Please install the protection diode for reverse polarity and back EMF protection.


CAUTION! Incorrect supply voltage may cause damage not covered by warranty.

Please check supply voltage with a suitable meter to ensure voltage is within $\pm 15\%$ of nominal voltage of 12VDC (or 24VDC) with the strike powered.

This product has been designed for use in weather protected areas only.
DO NOT OIL OR LUBRICATE.


The wiring diagram schematic is shown below.

24VDC 125mA

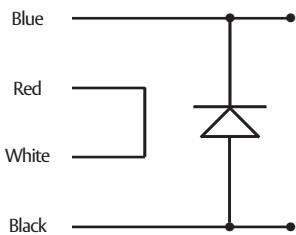

Blue and Black to Power Supply.
Red and White joined together.

12VDC 250mA

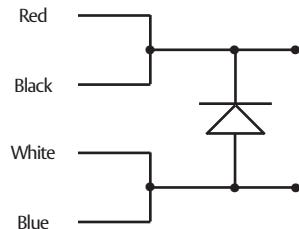

Red and Black joined and to Power Supply.
Blue and White joined and to Power Supply.


Cable gauge requirements					
Distance	Cable cross section	American wire gauge	Distance	Cable cross section	American wire gauge
5m	0.33mm ²	AWG22	20m	1.31mm ²	AWG16
10m	0.65mm ²	AWG19	30m	1.63mm ²	AWG14
15m	1.04mm ²	AWG17	50m	2.05mm ²	AWG12

DOOR AND FRAME PREPARATION


1. To enable the Electric Strike to be located in the door frame, first mark the position of the door latch front face on the door frame with the door in the closed position ('X' mm).
2. Mark where the centre of the latch meets the door frame:
 - For new installations, mark frame where front of latch touches the door frame at the midpoint of the latch bolt.
 - For retrofit installations, remove existing strike plate and ensure the latch fits into and is centred in the existing hole.

1

Marking of strike position

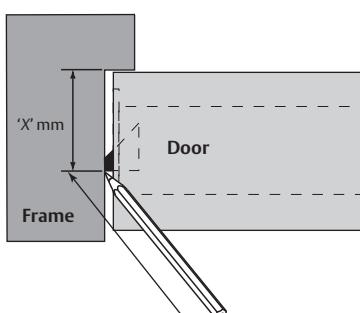

Mark door latch front face on frame (Line 1).

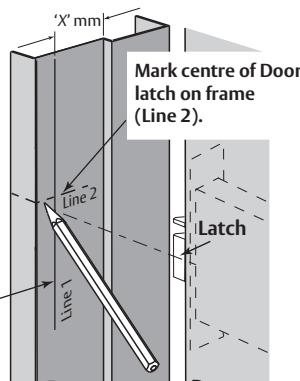


DOOR AND FRAME PREPARATION (CONTINUED)

3. Peel backing off adhesive template and centrally locate in the marked position, lining up both the mark for the door latch front face (Line 1) and the centre mark of the latch (Line 2).
4. For the metal frame, drill two Ø5mm holes (A) 24mm above and below the 'X' mark on the template. For a timber frame, drill two Ø3mm holes (B).
5. Ensure secondary bolt is not within strike cavity.
6. Using the template as a guide, mortice out the door frame to the required size.
7. Countersink holes in metal frame to accept screws.


2

Frame preparation

Metal Door Frame

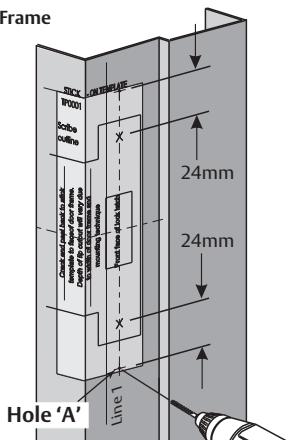


Timber Door Frame

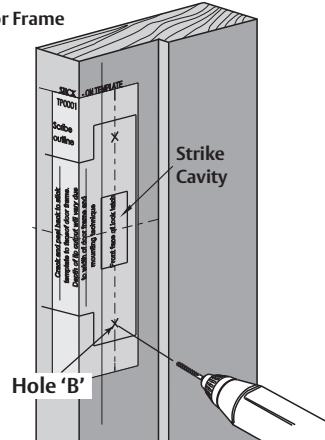


3

Morticing rebate



Metal Door Frame

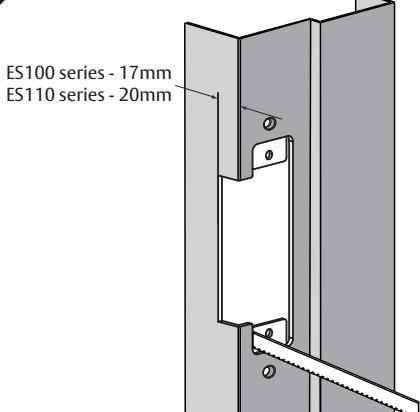

Timber Door Frame

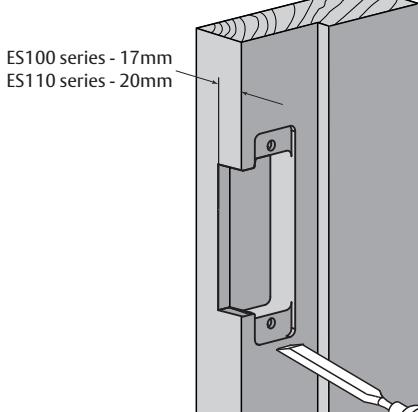

8. For metal door frames, fit door mounting brackets.
9. Once door frame preparation is complete, temporarily fit strike into door frame to check for interference. Check that the door closes smoothly and that the latch extends fully past the strike keeper.
10. When strike operates correctly with latch, remove strike from mortice and connect wiring.
11. Refit strike and secure, making sure no wires are being crushed.
12. Check both mechanical and electronic operations work correctly.

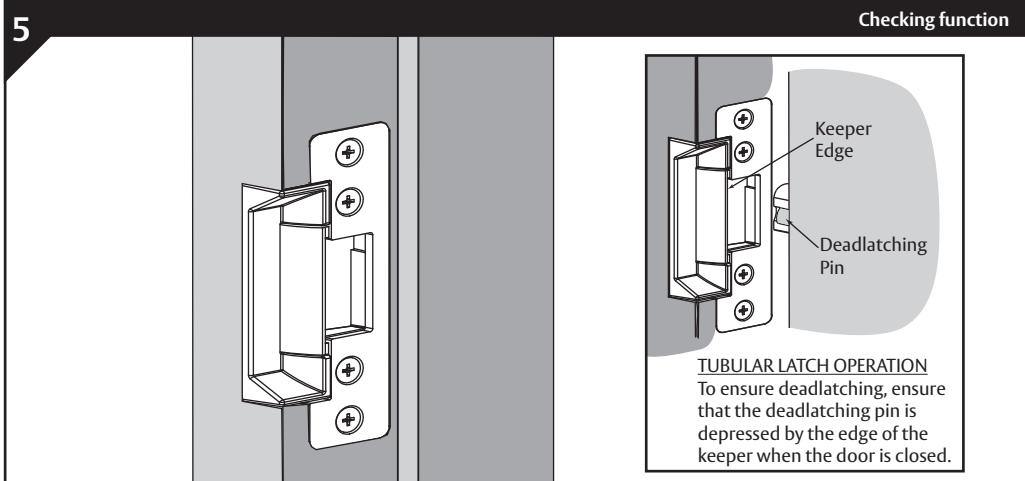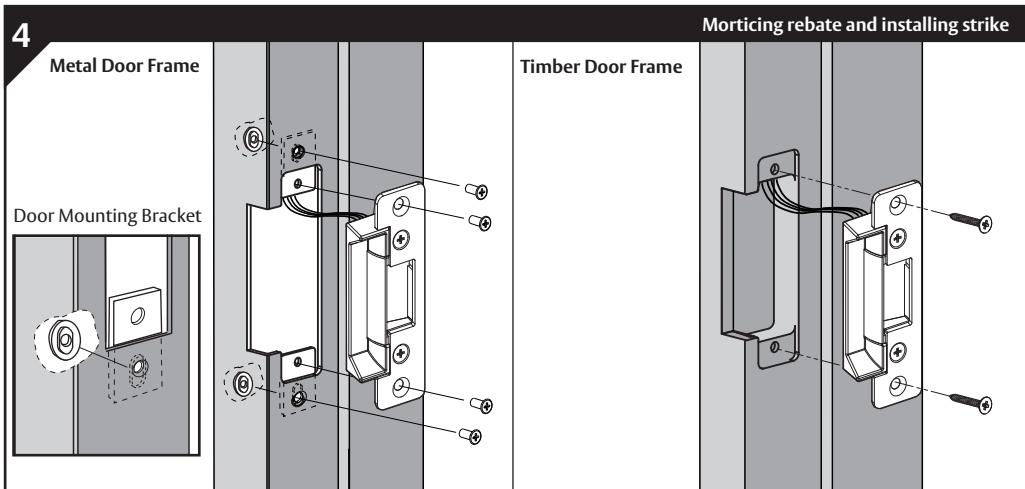

MAINTENANCE, STORAGE, AND DISPOSAL

MAINTENANCE

Clean the external surfaces with a dry cloth only, do not use chemicals.

FAULTS, REPAIRS & RETURNS

This product contains no user serviceable parts. Please contact your local supplier.

STORAGE AND TRANSPORT

The product should be transported and stored in its original packaging.

DISMANTLE & ENVIRONMENT

In the European Union, Norway, Iceland, and Liechtenstein: This symbol on the product, or in the manual and in the warranty, and/or on its packaging indicates that this product shall not be treated as household waste. Instead, it should be taken to an applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help to prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate handling of this product.

In Countries Outside the European Union, Norway, Iceland, and Liechtenstein: Dispose of packaging and product in a responsible manner, this may include recycling at your nearest recycling centre. Including the re-use and recycling of the materials & packaging of this product. Contact your local authority to find the nearest electrical and electronic equipment waste disposal point. This product must not be disposed of with regular household waste.



CERTIFICATION AND CONTACT DETAILS



EU CE DECLARATION OF CONFORMITY (DoC)

Hereby, ASSA ABLOY Australia Pty Ltd declares that the ES100/ES110 Series Electric Strike complies with the CE Directives including the Electromagnetic Compatibility (EMC) directive, Restriction of Hazardous Substances (RoHS) directive, Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation & Waste Electrical and Electronic Equipment (WEEE) directive & the *Construction Product Regulations (CPR). The full text of the EU declaration of conformity is available at:

www.trimec.com.au/en/products/electric-strikes/es100-series-electric-strike

www.trimec.com.au/en/products/electric-strikes/es110-series-electric-strike

*Only Part Numbers: Lockwood: ES110-2M. Trimec: 110112-060M, 110112-150M, 110112-160M, 110112-190M, 110112-140M



UKCA DECLARATION OF CONFORMITY (DoC)

Hereby, ASSA ABLOY Australia Pty Ltd declares that the ES100/ES110 Series Electric Strike complies with the United Kingdom (UK) legislations including the Electromagnetic Compatibility Regulations, Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations, Registration, Evaluation, Authorisation and restriction of chemicals (REACH), Waste Electrical and Electronic Equipment (WEEE) regulations & the *Construction Product Regulations (CPR). The full text of the UKCA declaration of conformity is available at:

www.trimec.com.au/en/products/electric-strikes/es100-series-electric-strike

www.trimec.com.au/en/products/electric-strikes/es110-series-electric-strike

*Only Part Numbers: Lockwood: ES110-2M. Trimec: 110112-060M, 110112-150M, 110112-160M, 110112-190M, 110112-140M

DECLARATION OF PERFORMANCE (DoP): ES110* - PtO mode ONLY

This product has been certified under the CE Construction Product Regulations by:

Element Materials Technology Rotterdam B.V. Notified Body #2812 Certificate: 2812-CPR-NA7802

This product has been certified under the UKCA Construction Product Regulations by:

Warrington Certification. Approved Body #1121 Certificate: 1121-CPR-UK-NA7803

ASSA ABLOY Australia Pty Ltd declares the following product performance in accordance with EN 14846: 2008.

A summary of the DoP is shown below, a full copy of the Declaration of Performance (DoP) is available at:

<https://www.trimec.com.au/en/products/electric-strikes/es110-series-electric-strike>

*Only Part Numbers: Lockwood: ES110-2M. Trimec: 110112-060M, 110112-150M, 110112-160M, 110112-190M, 110112-140M



RCM Australia & New Zealand

Hereby, ASSA ABLOY Australia Pty Ltd declares that the ES100/ES110 Series Electric Strike is in compliance with the Regulatory Compliance Mark (RCM) for Australia and New Zealand.

Manufacturer details

ASSA ABLOY Australia Pty Ltd.

235 Huntingdale Road, Melbourne
Victoria, 3166, Australia

Phone: 1300 LOCK UP (1300 562 587)
www.assaabloyopeningsolutions.com.au

UK Representative

ASSA ABLOY Opening Solutions

School Street, Willenhall, West Midlands
WV13 3PW, United Kingdom
www.assaabloy.com/uk/en